






BAKKER • NATUURSTEEN


ASSEMBLY INSTRUCTIONS

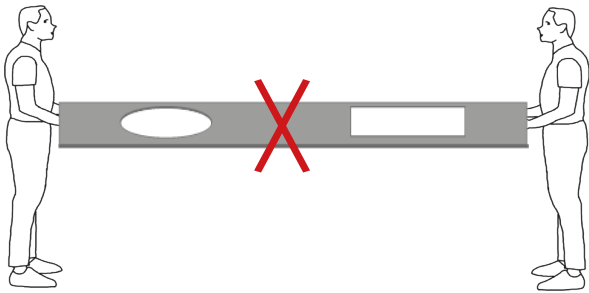


1. Never transport the worktop horizontally.

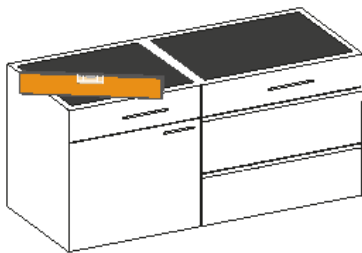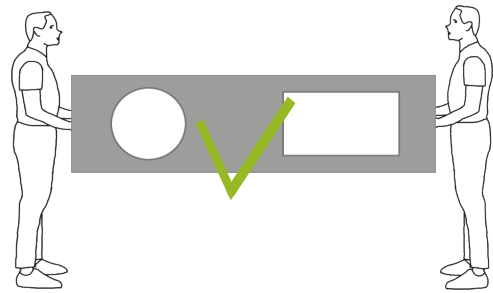


2. Make sure that the base cabinets are aligned 100% flush (use a level).

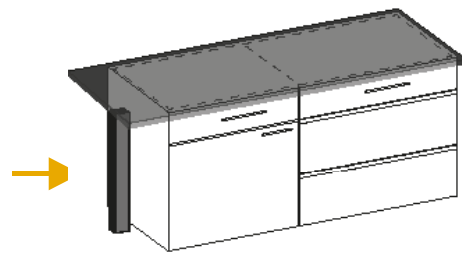


3. Make sure that there is enough and evenly divided support over the entire surface of the countertop. Pay particular attention to extruding bar/table elements.

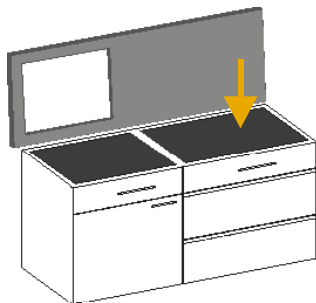

4. Install the countertop by first resting it vertically on the base cabinets.

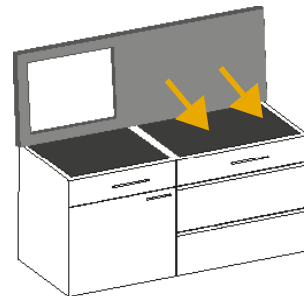


5. Carefully and in a controlled manner, tip it from its vertical position onto the base cabinets. If the countertop section is approx. 1.5 meters or longer, two people should support it when tipping it.

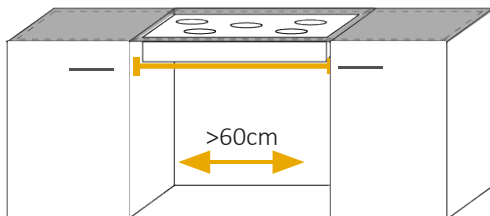

6. Make sure the sink and/or large cooktop has sturdy support. In any case, the sink and cooktop should be supported if:

- The worktop is 12 mm or 2 cm thick.
- The sink and/or cooktop is installed in cupboards > 60 cm.
- There is a stone sink and/or a sink made of stone with a stainless-steel bottom.

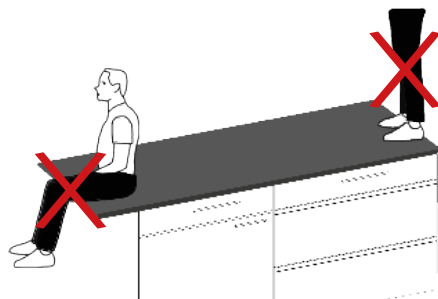

7. Never sit or stand on the countertop.

ALSO:

- Never lift the countertop on one side (on one end) from a flat position, not even if the countertop is already on the base cabinets.
- If damage or defects are detected, never install the worktop permanently. Install it so that any disassembly can be done easily.
- When sealing the joining seams and edges, use an acid-free sealant. **Do not use standard silicon sealant!**